


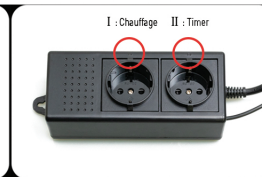

# Thermostat & Timer G04-00120



• Product box

• Provision

• Content

• Plug block to connect the heater and the timer.

• Setting the temperature difference: DL flashes. Use the arrows to set the desired temperature. Confirm and go to the next setting by pressing SET.

• Setting the temperature difference of the overheating alarm. M flashes. Use the arrows to set the desired temperature. Confirm and go to the next setting by pressing SET.



• Visual on first ignition.

• 1st step: disable the alarm. Stay on the 2 arrows 5s.

• AL is displayed.

• Press an arrow to display NO, confirm with SET.

• 1st setting the TIMER on the SOCKET II: L1. Use the arrows to set the start time FROM flashes. Press SET to go to the minute setting. Press SET to switch to the end time setting in the same way, TO flashes. Confirm and go to the next setting by pressing SET.

• 2nd setting the TIMER on the PLUG II: L2. Same as setting the L1 schedule. Confirm and go to the next setting by pressing SET.



• 2nd step: Mode settings: HEAT / COOL. Keep pressing SET for 5s.

• M flashes.

• Press the arrow to switch between COOL and HEAT mode.

• Confirm and go to the next setting by pressing SET.

• Setting the current time: C flashes. Use the arrows to set the current time. Press SET to go to the minute setting. Confirm and go to the next setting by pressing SET.

• Setting the start time of the day: C & S flash. Use the arrows to set the daytime temperature. Press SET to go to the minute setting. Confirm and go to the next setting by pressing SET.



• Setting the day temperature SET and S flash.

• Use the arrows to set the desired temperature. Confirm and go to the next setting by pressing SET.

• Setting the night temperature SET and M flash.

• Use the arrows to set the desired temperature. Confirm and go to the next setting by pressing SET.

• Réglage de l'heure de début de nuit : C & L clignote. Utilisez les flèches pour régler l'heure de température de nuit. Appuyez sur SET pour passer au réglage des minutes. Validez et passez au réglage suivant en appuyant sur SET.

• Setting the maximum and minimum safety temperature. Press the ^ arrow for 5 seconds until 50 is displayed and set your desired maximum temperature. Confirm by pressing SET. Repeat the operation with the down arrow to set the minimum temperature.